


# NAUTILUS<sup>®</sup> INSPIRATION

Designed with beautiful, modern aesthetics and uniform towers, Nautilus Inspiration Strength makes a powerful first impression. Each machine captures the essence of natural movement. Members will appreciate the many easy to use and easy to see features like our patented Lock N Load weight selection system, the wrap-around assisted seat adjustment, lenticular image placards, pre-stretch and range of motion controls designed to enhance each user's experience.

## DUAL ADJUSTABLE PULLEY NP-D9302

W	62 IN (157 CM)
L	46.5 IN (118 CM)
H	88 IN (224 CM)
STACK WEIGHT	2 X 400 LB (2 X 181 KG) 2 X 100 LB (AT HANDLE)
OVERALL WEIGHT	1,308 LB (593 KG)
SHIPPING WEIGHT	1,394 LB (632 KG)

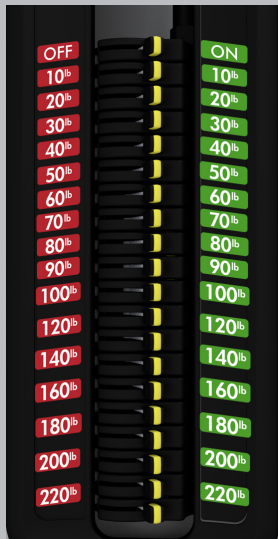

## LOCK N LOAD<sup>®</sup> WEIGHT SELECTION

Selecting a weight with the intuitive Lock N Load design is as easy as flicking a switch. Universally color coded switches engage and disengage the weight via an internal pin, providing a safer, more durable and maintenance free operation. Lock N Load prevents unnecessary maintenance headaches since there are no pins to lose or replace.



## SMART TOWER DESIGN

The beautifully designed Nautilus Inspiration line, with their uniform 64" (163 cm) towers, deliver superior lines of site across your venue and create a visually powerful impression during facility tours. The tower housing is designed to accommodate custom graphics and wraps to personalize the equipment in your facility.

### ADJUSTMENTS & MOVEMENTS

<b>USER DEFINED RANGE OF MOTION</b>	Unlimited high-low cable positioning combinations with extended cable travel for a variety of exercises. Plus standard, integrated pull up bar with multi-grip hand positioning.
<b>ASSISTED ADJUSTMENTS</b>	All steel adjustable pulleys with gravity assisted, single hand adjustment design.
<b>COLOR CODED PIVOT POINTS AND ADJUSTMENTS</b>	Yes on all units
<b>UNILATERAL OR BILATERAL MOVEMENT</b>	Dual, independent weight stacks allows for both unilateral and bilateral movements.
<b>CONVERGING OR DIVERGING MOVEMENTS</b>	Dual, independent weight stacks allows for both converging and diverging movements.
<b>PULLEY RATIO</b>	4:1 lifting ratio for smooth low inertia operation.

### FRAME SPECIFICATIONS & CABLE INFORMATION

<b>STANDARD FRAME COLOR OPTIONS</b>	60 Black
<b>STANDARD UPHOLSTERY COLOR OPTIONS</b>	Black
<b>FRAME FINISH</b>	Electrostatic Powder coating
<b>CUSTOMIZABLE PAINT OPTIONS AVAILABLE</b>	Yes with additional fees and extended lead times
<b>CUSTOMIZABLE UPHOLSTERY OPTIONS AVAILABLE</b>	Yes with additional fees and extended lead times
<b>CUSTOMIZABLE BRANDING OPTIONS AVAILABLE</b>	Yes with additional fees and extended lead times
<b>CABLE VS. BELT DRIVEN TRANSMISSION</b>	Cable drive
<b>BOLT DOWN LOCATIONS DEFINED</b>	Yes
<b>INTEGRATED LEVELING SYSTEM</b>	Yes
<b>HARDWARE TYPE</b>	Hex / Button Head
<b>TUBING STYLE &amp; THICKNESS</b>	Modern blend of square and round tubing. Most are 3 or 2.5mm / 11 ga

### USER SPECIFIC INFORMATION

<b>STATIC PLACARDS</b>	Yes, full color static placards on both right/left steel shrouds. Intuitive exercise placards featuring 12 targeted movements.
<b>MULTI-LANGUAGE PLACARDS OPTIONS AVAILABLE</b>	Yes
<b>ANIMATED LENTICULARS</b>	N/A
<b>SAFETY CATCH &amp; STOPS</b>	Yes, built into adjustment handles.
<b>WATER BOTTLE HOLDER</b>	N/A
<b>PHONE HOLDER</b>	N/A
<b>GRIP SPECIFICATIONS</b>	Rubber, large grips for pushing, smaller grips for pulling.
<b>FOOT PLATFORM</b>	N/A
<b>CONTOURED PADS</b>	N/A
<b>BELT STABILIZATION SYSTEM</b>	N/A

### WEIGHT STACK SPECIFICATIONS

<b>TOTAL STACK WEIGHT</b>	2 x 440 lbs (2 x 181 kg). With the 4:1 ratio, the weight at each handle is 100 lbs (45 kg)
<b>INCREMENTAL WEIGHT SYSTEM</b>	10 lb increment, 5 lb add on
<b>WEIGHT STACK TOWER HEIGHT</b>	Dual, independent weight stacks standing inside the frame 91 in (231 cm)
<b>PLATE LOADED</b>	N/A
<b>WEIGHT STORAGE SOLUTION</b>	Integrated accessory storage pegs. Comes standard with (2) 6" grip handles, (1) stirrup handle, (1) ankle strap, (1) body strap, (1) long bar
<b>LNL TECHNOLOGY</b>	Yes
<b>ADD-ON RESISTANCE AVAILABLE</b>	Yes, 5 lb incremental add on plate
<b>WEIGHT STACK SHROUD SPECIFICATIONS</b>	Uniform size, standard steel / customized aluminum materials