

VAPOR STRYKER SLAT TREADMILL

TRUE heritage and engineering come together to provide your facility with the TRUE Stryker Slat Treadmill. The Stryker features a running surface of vulcanized rubber slats that are more durable and require less maintenance than the conventional conveyor belt system of traditional treadmills. The individual shock-absorbing slats provide a running surface closer to the natural feel of outdoor running for those looking for a more realistic training experience.

FEATURES

- Less downtime and overall lower cost-of-ownership than traditional treadmill
- Requires less maintenance; no need for tracking adjustments, waxing, or flipping of deck with slat system
- Ergonomic pistol-grip handles with thumb controls and center pod with quick speed and incline keys
- Over-molded rubber slat belt with 62 individual slats and running surface of 22"/55 cm x 60"/152 cm
- Three emergency stops for safety (on console, center pod, and safety key)

SPECIFICATIONS

DIMENSIONS (L X W X H)
72" L x 35" W x 64" H /
183 cm x 89 cm x 163 cm


SPEED
.5 to 12.5 MPH / .8 to 20 KPH (0.1 increments)

INCLINE/DECLINE RANGE
0% to 25% (-3% to 22% with Decline Kit)

PRODUCT WEIGHT
599 lbs / 272 kg

COLOR
Matte Black

CONSOLE OPTIONS

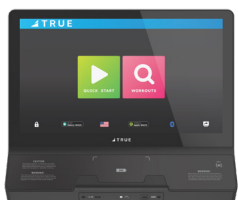

**UNITE 22"
TOUCHSCREEN**



**UNITE 16"
TOUCHSCREEN**




**UNITE 10"
TOUCHSCREEN**



**UNITE LED
CONSOLE**



Easy-access
quick-touch keys

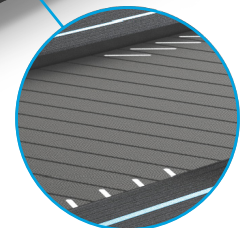

shock-absorbing
slat design

VAPOR STRYKER SLAT TREADMILL

TECHNICAL SPECIFICATIONS	Power Source	110V/20A Dedicated (NEMA 5-20 Receptacle), 220-240V/15A Option Available
	Cord Length	12' / 3.7M
	Power Factor Correction (PFC)	Standard
	Resistance Source	Double-Braking System
	Incline Motor	1,200 lbs. of thrust
	Speed Sensor	Optical
	Slat	62 vulcanized rubber slats - durometer of 75 shore
	End Rollers	58 mm diameter with shielded bearings
	Slat Belt Support Bearings	22 mm diameter with sealed bearings
	Frame Construction	Robotically Welded Heavy-Gauge Steel
	Speed Range	.5 to 12.5 MPH / .8 to 20 KPH
	Incline/Decline Range	0% to 25% (-3% to 22% with Decline)
	Quick Access Control	Mechanical thumb switches and center pod with quick keys (speed and incline) as well as emergency stop
	Handrail Design	Continuous MultiGrip Handrails with Molded Rubber, Moisture-Resistant Grips
	Contact Heart Rate Monitoring	Yes
	User Detection	Person Present Detection
	Asset Management	Ecofit
AVAILABLE CONSOLES	UNITE 22", UNITE 16", UNITE 10", and UNITE LED	
WORKOUTS	UNITE 22", UNITE 16" and UNITE 10" Consoles	10K, 5K, AIR FORCE, ARMY, CALORIE GOAL, CARDIO CHALLENGE, DISTANCE GOAL, DRAW YOUR OWN, GERKIN, HALF MARATHON, HILL INTERVALS, HRC CRUISE CONTROL, LEG SHAPER, MARINES, MONUMENT WORKOUT, NAVY, PEB, QUICK START, ROLLING HILLS, SINGLE HILL, SPEED INTERVALS, TARGET HRC, TIME GOAL, VIRTUAL RUNS, WEIGHT LOSS HILL
	UNITE LED Console	10K, 5K, CALORIE GOAL, CARDIO CHALLENGE, DISTANCE GOAL, GERKIN, HALF MARATHON, HILL INTERVALS, HRC CRUISE CONTROL, LEG SHAPER, QUICK START, ROLLING HILLS, SINGLE HILL, TARGET HRC, TIME GOAL, and WEIGHT LOSS HILL
EXTRAS	Accessories	Water Bottle Holders (2), Accessory Tray, Reading Rack/Tablet Holder
PHYSICAL SPECIFICATIONS	Dimensions	72" L x 35" W x 64" H / 183 cm x 89 cm x 163 cm
	Running Surface	22" L x 60" W / 56 cm x 152 cm
	Machine Weight	599 lbs / 271 kg
	Shipping Weight	645 lbs / 293 kg
	Shipping Dimensions	80" L x 42" W x 29" H / 203 cm x 107 cm x 74 cm
	Maximum User Weight	500 lbs / 227 kg
	Deck Step-Up Height	13" / 33 cm
	Portability	Rear Retractable Transport Wheels
COMMERCIAL WARRANTY	Frame	7 Years
	Parts	3 Years
	Labor	2 Years
	Consoles	3 Years

Warranties outside the U.S. and Canada may vary - Please contact your dealer for details. Specifications subject to change without notice.